

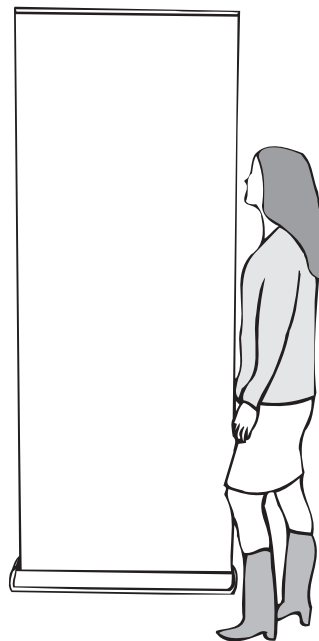
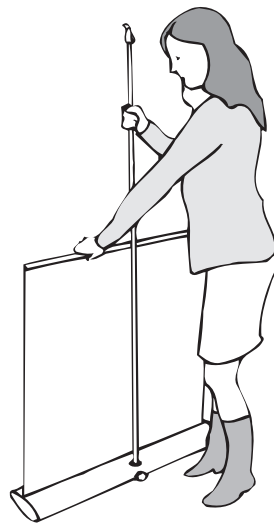



Expand MediaScreen 3

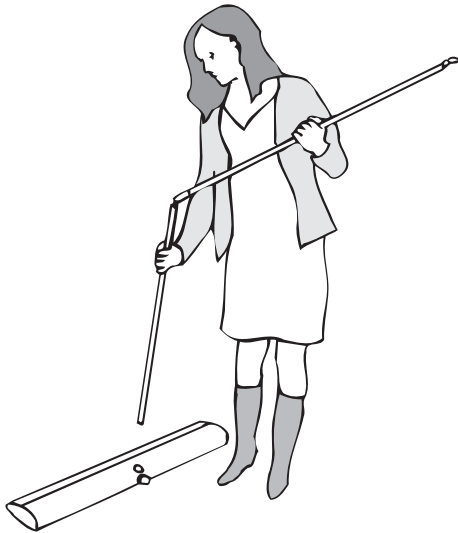


Vertical graphic

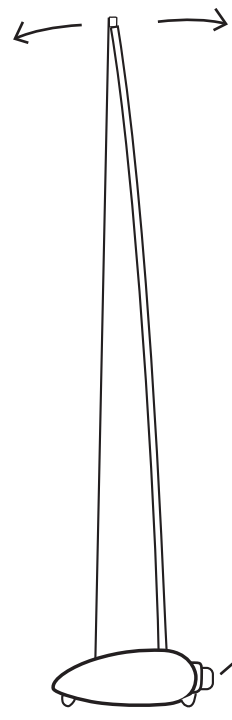


Turn knob to adjust leaning if needed.

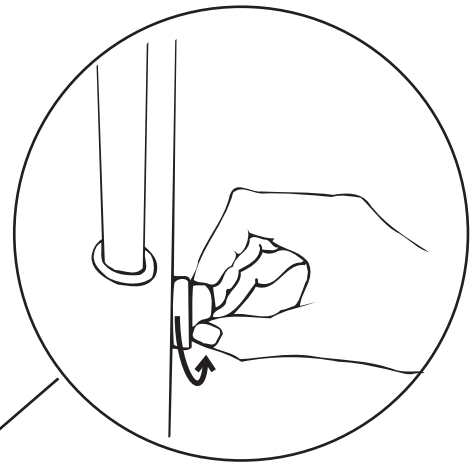


Change graphic cassette

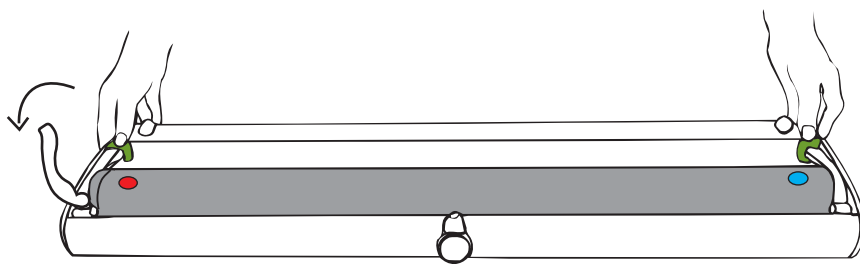

Press to open snap locks

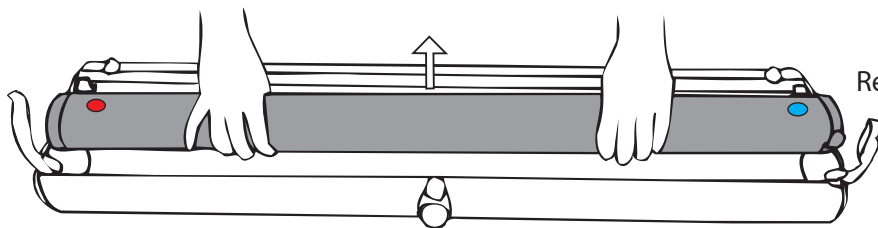

Remove cassette

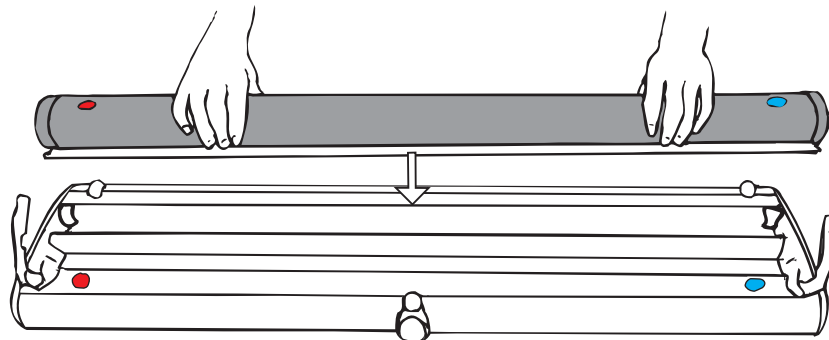

Insert new cassette and close snap locks